

# Emergency Pendant

For use with EasyTel 3G Homephone



## User Manual

Version 1




Electrical Certification for use  
in Australia & New Zealand



1

## Connecting your Emergency Pendant to the EasyTel


1. Ensure Bluetooth is **Activated** on you EasyTel (see pg. 47 of the EasyTel User Manual).
2. Select **Add new device** on you EasyTel and then immediately press and hold the button on the pendant for 8 seconds. "OLITECH" should now appear on the EasyTel's device list.
3. Select **Pair**. "OLITECH" should now have a tick in the box to the left.

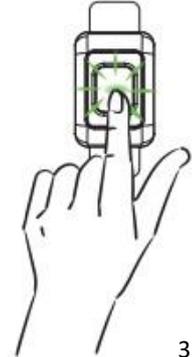

3

## Wearing Options

The emergency pendant can either be worn as a bracelet (left) or on a lanyard (right). Setup details seen below.

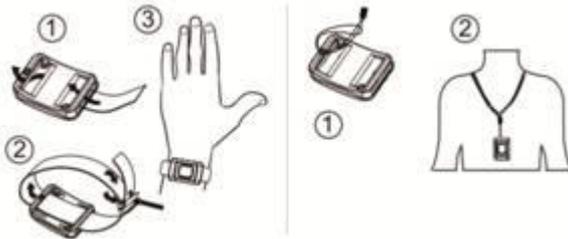

2


4. Once paired, on the EasyTel select **Options** → **Authorisation settings** → **Auto connect**.

## Activating your Emergency Pendant

1. Set up and activate the **Emergency Key** on the EasyTel (see pg. 43-47 of the EasyTel User Manual). Once active the SOS icon will be displayed on the EasyTel's screen.
2. To trigger the emergency pendant, press and hold the button for 3 seconds. The emergency sequence will now commence (alarm → SMS sent → call's commence). Please ensure the user and listed contacts are aware of the emergency sequence requirements.

4

### Charging and Battery Life

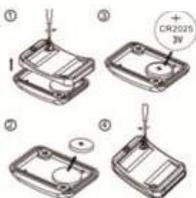

The emergency pendant has a stand by time of approximately 2 years. When the battery is low, the RED LED will flash every 3 seconds during an emergency call sequence. 48 hours before the battery is exhausted, a red light will

illuminate from the pendant. A visual guide to changing the battery can be seen on the left. Only use a +CR 2025 3V battery with the emergency pendant. CAUTION – there is a risk of harm to the pendant and persons if incorrect battery or fitting technique is used.

5

### Certification, Warranty and Limitation of Liability

The Olitech Emergency Pendant has **achieved RCM certification** - electrical certification for use in Australia and New Zealand. The product holds a **12 month limited warranty** for hardware and software manufacturing faults. Any loss, damage or misuse immediately voids warranty. Olitech Technology (ACN: 611 802 674) accept no liability for any loss or damage caused to people or property during use or maintenance of this product. Users use this device at their own risk. Please dispose of this electronic device and all parts responsibly.

7

### Connectivity Range & Product Care

The **connectivity range** of the emergency pendant is approx. 10-12 metres (indoor) or 20 metres (outdoor) from the EasyTel phone. This can vary depending on the individual environment and should be assessed prior to use.

The emergency pendant is **water resistant** and may be worn while having a shower however should **not be submerged in water**. For the user's hygiene keep the unit clean and dry. The wristband and lanyard may be removed and washed. The pendant can be cleaned with a damp cloth (no chemicals).

6

### Troubleshooting and Contact

If you experience any difficulties in the setup or use of your emergency pendant please ensure the device has been paired successfully with the EasyTel and the Emergency key on the paired EasyTel has been activated and setup. In addition to this manual, the EasyTel User Manual provides valuable information to assist with these processes. Additional information including manuals, FAQ's and tutorial videos can also be found on our website [www.olitech.com.au](http://www.olitech.com.au). Alternatively we can be contacted on 1300 60 50 30 during our customer service hours.

8